

## Used Man Riding Basket / Access Cage / Work Platform 500kg Swl

**Our Ref:** 20404

**Price :** £540.00 inc VAT.

**Website :** [Click here to view this item on our website](#)

If you have any questions please do not hesitate to contact us

---







# CONTACT

The Quality Leader In Forklift Truck Attachments

Email: sales@for  
www.for  
Tel: +44 (0)1686 6

Serial No. 111125

To Suit Forks 150x100mm Max

Date Manf. NOV 2019

No. of Persons 2 Man

Model Ref. WP-STD-MK-4-700SPR

Mass 96kg

C of G (Min) 420mm

C of G (Max) N/A

Load Rating 500kg

Load Centre 500mm

DIRECTIVE 2006/42/EC

Contact Attachments Ltd  
Unit E Mochdre Industrial Estate  
Newtown  
Powys  
SY16 4LE

YOUR NEXT EXAMINATION IS DUE



**MAY 2020**

THIS IS A LEGAL REQUIREMENT

CALL US ON +44 (0) 1686 611200



















## OPERATING INSTRUCTION AND WARNINGS

- a. Warning cones, lights or signs must be placed around the truck working area where there is any possibility of other vehicles coming into close proximity or of objects falling from the platform. Where necessary other adjacent operations or activities may have to be suspended.
- b. Special precautions may be necessary to ensure that personnel in the platform are not endangered by overhead hazards such as live electrical hazards, travelling cranes etc.
- c. As far as reasonably practicable any work carried out from a platform should be within the area bounded by the guard rails and it is not advisable for persons to lean out.
- d. Truck operators and persons working on platforms must be properly trained and given instructions on a safe system of working.
- e. The truck operator must remain at the controls of the truck while the platform is in an elevated position.
- f. It is essential that the truck be used only on a well maintained and firm surface that facilitates lifting operations in a substantially vertical plane. Users must bear in mind that gradients can adversely affect the stability of the truck.
- g. Communication between the truck driver and the person on the platform must be possible at all times.
- h. The truck must not be moved when personnel are on the work platform.

**ENSURE THAT THE PARKING BRAKE IS APPLIED AND (WHERE APPLICABLE)  
THE TRANSMISSION IS IN NEUTRAL BEFORE ELEVATING THE PLATFORM.**





**500kgs**  
Safe Working Load

**CAUTION:**  
ENSURE YOU ARE TRAINED  
DEVISE A LIFT PLAN  
ENSURE YOU HAVE REALISED  
CHECK THIS EQUIPMENT  
CHECK LIFTING ACCESSORIES  
TAKE NOTE OF YOUR THOROUGH  
REPORT ANY ISSUES IMMEDIATELY  
IF IN DOUBT, ASK  
**FAILURE TO FOLLOW THESE**